



FUSE REPLACEMENT TABLE

FUSE 1	= 1 Amp Slow
FUSE 2	= 1 Amp Slow
FUSE 3	= 1.5 Amp Fast